



产品型号: QR-Spacewalker X8
 Model NO.: QR-Spacewalker X8
 最新版本: V1.0
[Latest version:V1.0](#)

日期 Date	更新历史 Update history	软件下载 download
2012-6-14	QR-Spacewalker X8 程序文件 V1.0 版本发布 QR-Spacewalker X8 programe document V1.0 version released	QR-spacewalker X8 nTx v1.0.bin
	QR-Spacewalker X8 双向传输程序文件 V1.0.版本发布 QR-SpacewalkerX8 telemetry programe document V1.0 version released	QR-spacewalker X8 Tx v1.0.bin
	QR-Spacewalker X4 程序文件 V1.1.版本发布 QR-Spacewalker X4 programe document V1.0 version released	QR-Spacewalker X4 nTx v1.0.bin
	QR-Spacewalker X4 双向传输程序文件 V1.1.版本发布 QR-SpacewalkerX4 telemetry programe document V1.0 version released	QR-Spacewalker X4 Tx v1.0.bin
	QR-Spacewalker Y6 程序文件 V1.1.版本发布 QR-Spacewalker Y6 programe document V1.0 version released	QR-Spacewalker Y6 nTx v1.0.bin
	QR-Spacewalker Y6 双向传程序文件 V1.1.版本发布 QR-SpacewalkerY6 telemetry programe document V1.0 version released	QR-Spacewalker Y6 Tx v1.0.bin

最新版本更新说明

[latest version update details](#)

升级注意事项:

Note:

1. 升级程序需使用 UP02 及 UP02 适配器为升级工具

1: It's necessary to use the UP02 and UP02 adaptor for this upgrade steps.


2. 本次升级程序提供了 RX2640H-D 电路上 8 轴转 4 轴及转三轴 Y6 型飞碟的程序。可根据需要升级对应程序

2.The upgrade program provides RX2640H - D circuit 8 axis to 4 axis and turn the three-axis Y6 type UFO program . Need to upgrade to the corresponding program.

电脑安装好 UP02 软件，在 USB 端口插入 UP02，并打开软件升级界面，点击“connect”使通信端口联接上；按下图接好 UP02 适配器的三芯插头到接收器上，再接上电池


[Install the UP02 software in the PC,connect the UP02 with the USB,and open the software upgrade interface , click “Close”connect with software;](#)

[Please refer to below Illustration and connect the UP02 adaptor with the receiver , and then connect with the battery.](#)

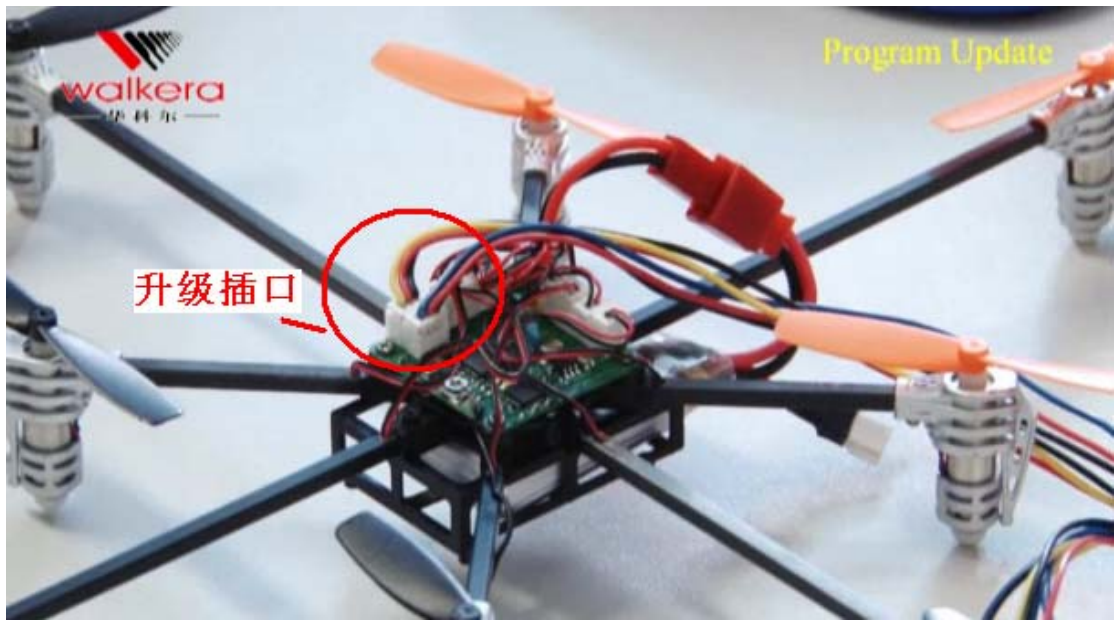

在下面界面会出现已检测的机型型号和版本

The model NO. and version will show in below interface .

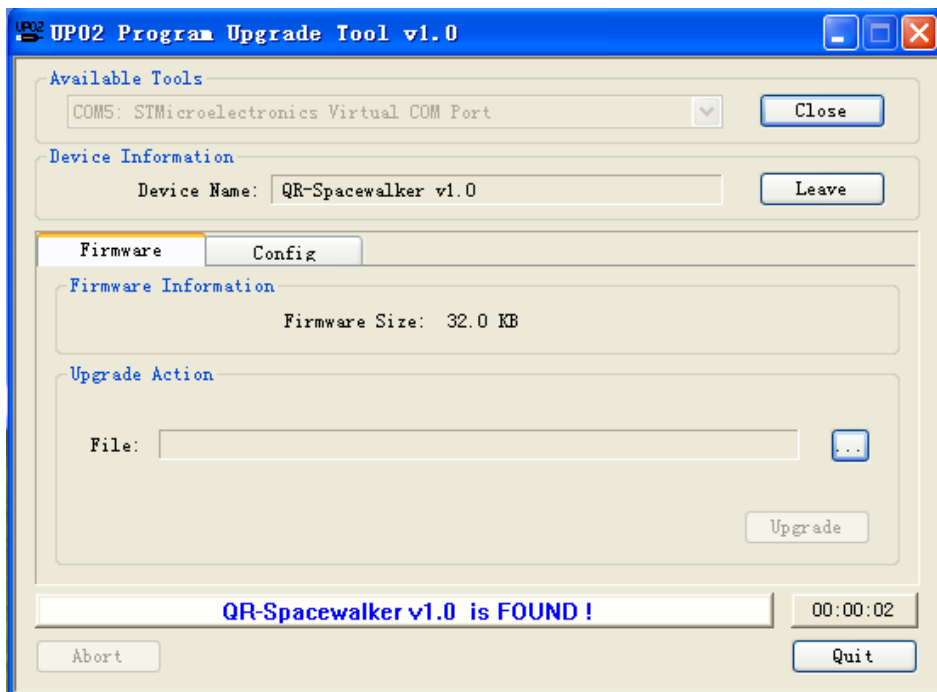

按 User Manual v1.0.pdf 说明操作。选择升级文件及升级操作；可参考官网 QR-Spacewalker 录像

Please refer to User Manual V.10.PDF user manual, and select the upgrade document and upgrade steps. Refer to the official website of QR - Spacewalker video

附： enclosed with the user manual of the UP02.

升级工具UP02使用说明 Upgrade tool—UP02 user manual

本产品用于DEVO-7遥控器和可升级的接收器升级。

1. 安装UP02软件，下载升级机型程序。

2. 按示意图连接好升级工具。

DEVO-7遥控器升级时参照图(1)。

接收器升级时参照图(2)，具体机型升级时参照产品说明书。

3. 升级。

This upgrade tool used for DEVO-7 radio and some receivers can be upgrade.


1. Install the UP02 software, download the programe of the helicopters.

2. Please refer to the Illustration and connect the UP02 with PC. Illustration for upgrade the DEVO-7 radio refer to Illustration (1). Illustration for upgrade the receiver refer to Illustration (2), please refer to the particular model's user manual for different model.

3. Upgrade.

示意图:

See the Illustration:

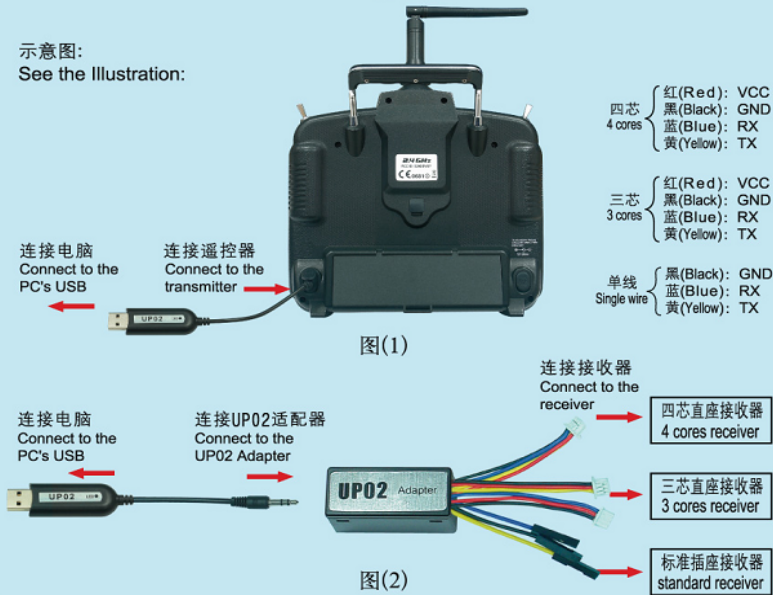

UP02适配器使用说明 UP02 adaptor user manual

本产品用于三种不同插座的接收器升级转接。

1. 四芯：黑蓝黄红四线升级转接插头，用于间距1.25mm四芯直座的接收器升级。

2. 三芯：黑红蓝线和黑红黄线升级转接插头，用于间距1.25mm三芯直座的接收器升级。

3. 单线：黄色、蓝色和黑色单线升级转接插头，用于标准插座的接收器升级。

This adaptor used for connecting with UP02 and receivers with three different jacks to upgrade.

1. 4 cores jack: Plug the jack with black, blue, yellow and red four different colors' wire to the receiver's 4 cores jack which is 1.25 mm space between the 4 cores.

2. 3 cores jack: Plug the jack with black, blue and red three different colors' wire to the receiver's 3 cores jack which is 1.25 mm space between the 3 cores.

3. Single wire: Plug the jack with yellow, blue and black single wire to the standard receivers for upgrade.

示意图:

see the Illustration:

