


## 1.0 Boot Screen

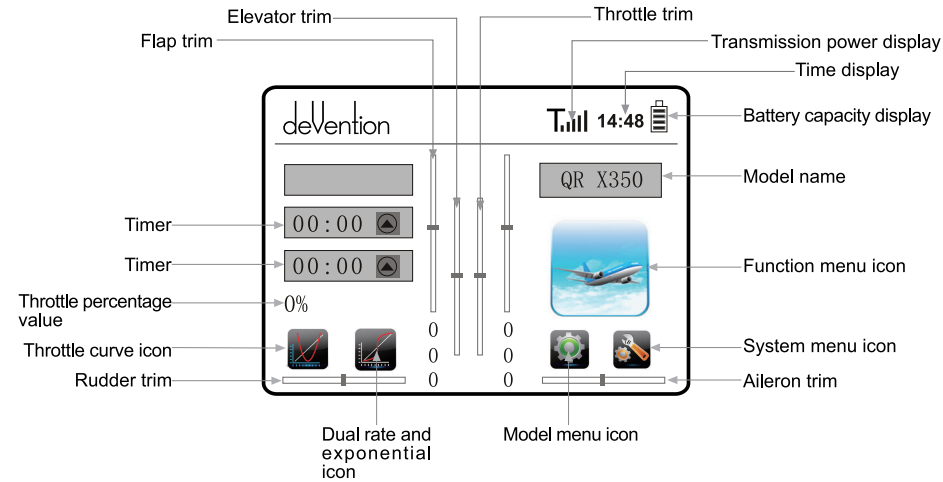


## 2.0 Type Select


Touch the shortcut icon to enter Mode Menu, and then click the icon to enter the interface of Type Select. Select the **Airplane**, and then click the icon to exit.

## 3.0 Model Select

Touch the icon to enter Model Menu and then click the icon to enter Model Select. Touch the model you desire. The selected model is changed in orange color. Then click the icon to exit.

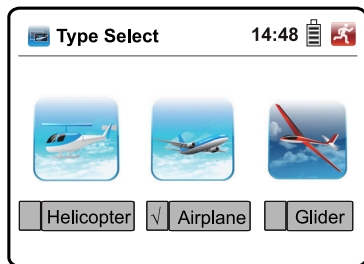

2.0 Type Select

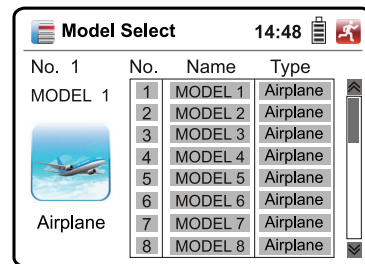


3.0 Model Select

## 4.0 Model Name


Touch the shortcut icon to enter Mode Menu, and then click the icon to enter the interface of Model Name. Then name the above selected item as "QR X350". Touch the icon to exit.

## 5.0 Wing Type

Touch the shortcut icon to enter Mode Menu, and then click the icon to enter the interface of Wing Type. Touch the navigation mark of Wing Type, choose "Normal" item, and then click the icon to exit.

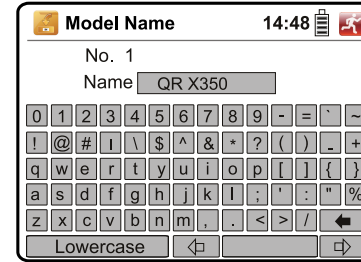

4.0 Model Name

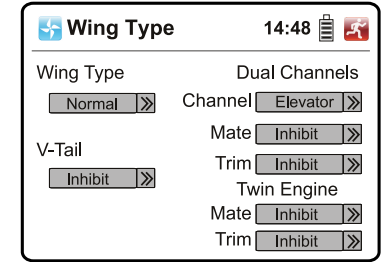


5.0 Wing Type

## 6.0 Device Output

Touch the shortcut icon to enter Mode Menu, and then click the icon to enter the interface of Device Output.

### (1) Gear

Touch the left column navigation mark of Gear and choose "MIX SW" item; Touch the right column navigation mark of Gear and choose "Active" item.

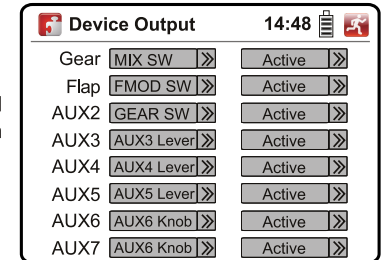

### (2) Flap

There will show the switch option only after the right column of Flap is selected. Touch the right column of Flap and choose "Active"; Touch the left column navigation mark of Flap and choose "FMOD SW" item.

### (3) AUX2

Touch the left column navigation mark of AUX2 and choose "GEAR SW" item; Touch the right column navigation mark of AUX2 and choose "Active" item. Then click the icon to exit.

## 7.0 Reverse Switch

Touch the icon to enter Function Menu, and then click the icon to enter the interface of Reverse Switch to set as below, and then click the icon to exit.

