


1.0 Boot Screen

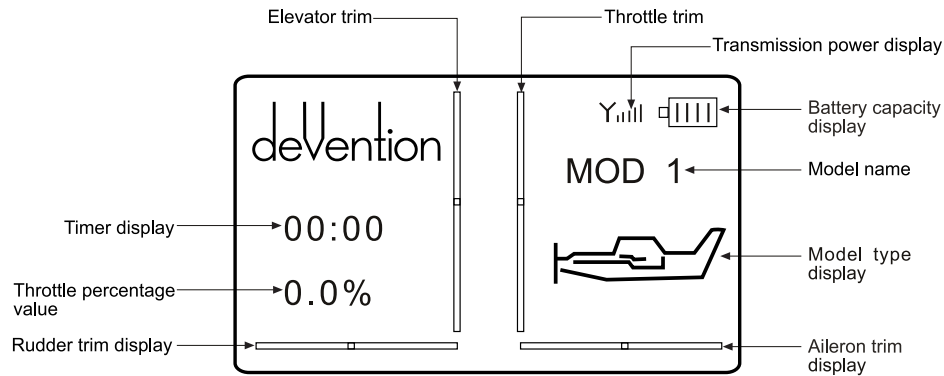

2.0 Type Select


Press ENT to enter Main Menu and press UP or DN to select Model Menu. Press ENT to enter and press UP or DN to select Type Select and press ENT to enter setting interface. Press R or L to get the icon of "Airplane" and press ENT to confirm, then press EXT to exit.

3.0 Model Select

Press UP or DN to select Model select in Model Menu, press ENT to enter the Model Select setting interface; press UP or DN to select MOD 1, then press ENT to confirm and then press EXT to exit.

4.0 Model Name

Press UP or DN to select Model Name in Model Menu, press ENT to enter the Model Name setting interface. Press UP or DN to select the character and figure which need to be changed, press R or L to change character and named "QR X350". Press EXT to exit after finished.

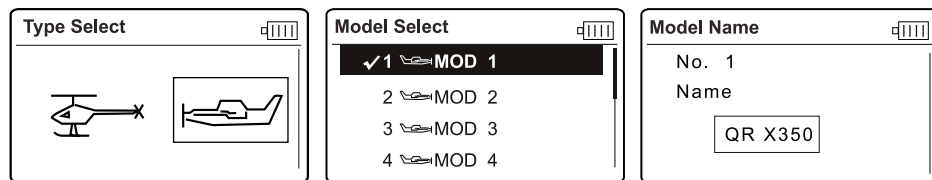


2.0 Type Select

3.0 Model Select

4.0 Model Name


5.0 Wing Type

Press UP or DN to select Wing Type in Model Menu, press ENT to enter the Wing Type setting interface; Press UP or DN to select "Wing Type" setting, press R or L to select "Normal", then press ENT to confirm and then press EXT to exit.

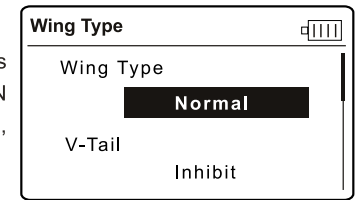

6.0 Device Output

Press UP or DN to select Device Output in Model Menu, press ENT to enter the Device Output setting interface.


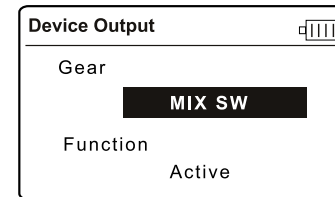


(1) Gear setting

Press UP or DN to select "Gear" setting, press R or L to select "MIX SW"; Press UP or DN to select "Function" setting, press R or L to select "Active".

(2) Flap setting

Press UP or DN to select "Function" setting below Flap, press R or L to select "Active"; Press UP or DN to select "Flap" setting, press R or L to select "FMODE SW".

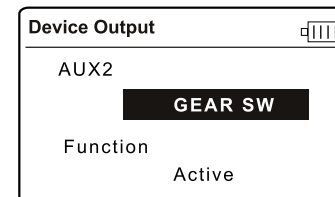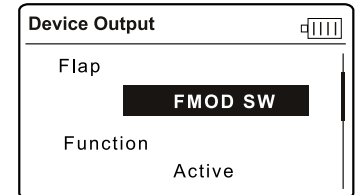


(3) AUX2 setting

Press UP or DN to select "AUX2" setting, press R or L to select "GEAR SW"; Press UP or DN to select "Function" setting, press R or L to select "Active", then press ENT to confirm and then press EXT to exit.

7.0 Reverse Switch

Press UP or DN to select Function Menu in Main Menu, press UP or DN to select Reverse Switch and press ENT to enter the Reverse Switch setting interface; Press UP or DN to select channel, press R or L to shift the status between normal and reverse, and press ENT to confirm and then press EXT to exit.

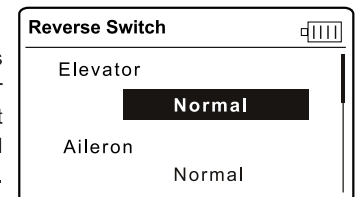

Channel	Elevator	Aileron	Throttle	Rudder	Gear	Flap	AUX2	AUX3	AUX4	AUX5
Status	Normal	Normal	Normal	Normal	Normal	Normal	Normal	Normal	Normal	Normal